

# Usage and aftercare

## Shiva and Daiya



### Cleaning

Rinse your bottle with warm water (not hotter than 65 degrees) before use. When closing the cap, make sure that the threads and the top edge of the bottle are dry. This prevents leaks.

We recommend **regularly cleaning your Tacx bottle with soapy water. For a deeper clean, you can safely place it in the dishwasher at a temperature of up to 65°C.** Be sure to keep it away from heavily soiled dishes to prevent potential discoloration.

We recommend not placing the pull lid of the Daiya in the dishwasher, and instead washing it by hand.

Instructions on how to remove the pull lid can be found at the bottom of this product sheet.

If your bottle still has an unpleasant smell, try cleaning it with warm water and vinegar, then rinse thoroughly.

After scrubbing, **store the bottle and cap separately** to ensure they dry properly.

Avoid using chemical cleaning agents, as they may kill bacteria but leave behind an unpleasant taste.

### Freezing, Microwaving, and Refrigerating

Please note that Tacx bottles should **not** be placed in the freezer or microwave. However, you can fill your bottle with a chilled drink and store it in the refrigerator before heading out. Adding a few ice cubes is also a great way to keep your drink cool!

### Suitable Drinks

Tacx bottles are suitable for all regular cold drinks, including milk-based beverages. If you're using a Shiva or Fuse bottle, you can even store carbonated drinks by blocking the cap. Just be cautious when opening the bottle, as the pressure from carbonation may cause the liquid to spray out when you release the cap blockage.

**Hot drinks like tea, coffee, and soup are not suitable for our bottles.**

We recommend warm drinks up to 40 degrees.

After using the bottle with organic drinks such as milk or orange juice, please clean it thoroughly.


**We hope these tips help you enjoy your Tacx bottle to the fullest!**

# Daiya Pull Lid

## Clean/Replace

### Remove the Pull Lid

1. Press the pull lid to one side so that the first clip on the pull lid comes out of the cap.
2. Repeat the process on the second and third side to release all the clips and remove the entire pull lid from the cap.

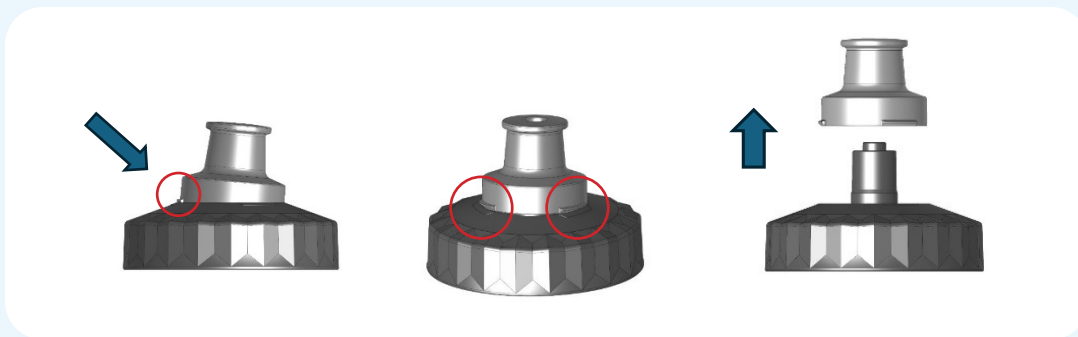

### Clean the Pull Lid

1. We recommend washing the pull lid with soapy water.
2. The cap itself can be placed in the dishwasher for cleaning.

### Replace the Pull Lid

1. Carefully position the clips on the pull lid to align with the markings on the cap.
2. Press the pull lid into place until it clicks into position.

